

## OPERATING INSTRUCTIONS FOR Model LL-300 LOOP LOCATOR



1. Connect the loop to the two red alligator clips.
2. Turn the power switch "ON". The green Battery Condition LED must illuminate. If the green Battery Condition LED does not illuminate, replace the 9 volt battery.
3. The "DETECT" LED illuminates and the buzzer sounds when a vehicle is over the loop.
4. When the power is "ON" and no loop is connected the "buzzer" emits a pulse sound. This is an indication of an open loop and also acts as a reminder to turn the power "OFF".

5. The 9 volt battery is accessed by the battery cover located on the bottom of the backside of the case.



P/N 889-0018-00

## OPERATING INSTRUCTIONS FOR Model LL-300 LOOP LOCATOR



1. Connect the loop to the two red alligator clips.
2. Turn the power switch "ON". The green Battery Condition LED must illuminate. If the green Battery Condition LED does not illuminate, replace the 9 volt battery.
3. The "DETECT" LED illuminates and the buzzer sounds when a vehicle is over the loop.
4. When the power is "ON" and no loop is connected the "buzzer" emits a pulse sound. This is an indication of an open loop and also acts as a reminder to turn the power "OFF".

5. The 9 volt battery is accessed by the battery cover located on the bottom of the backside of the case.



P/N 889-0018-00